


HOW TO MEASURE FOR **REPLACEMENT GASKETS**

STEP 1: IDENTIFY THE TYPE OF GASKET YOU NEED REPLACED


SINGLE DART

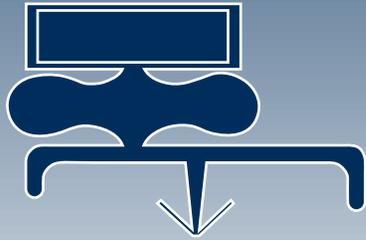

TRIPLE DART FRP



SCREW ON

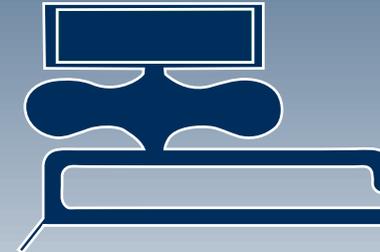


STEP 2: GET THE DIMENSIONS OF THE CLEAR OPENING



For KPSG Manufactured Doors:
Provide the Clear Opening
Dimensions and either order
online or with our parts team

For all other Manufactured
Doors or if you only have the
measurement of the gasket
itself, please contact our parts
team directly

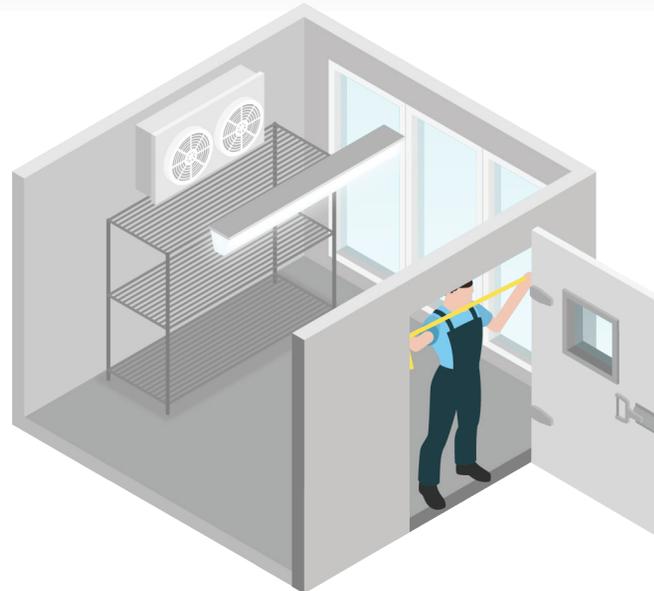

To measure the width, stand inside
the door and measure the clear
opening – picture trying to carry a
box through the door. That's the
width you need to measure.



To measure the height, measure
the clear area of the interior
opening – basically from the floor
to the horizontal door frame visible
on the inside.



Don't worry about the actual door
height –we don't need it.